

# Signal processing for SSVEP BCI

Arne Van Den Kerchove  
arne.vandenkerchove@kuleuven.be


Summer project 2022

NEUROTECH  
LEUVEN


KU LEUVEN

## Steady State Visually Evoked Potentials


If a stimulus oscillates at a specific frequency, an oscillation at the same frequency will also appear in the brain activity of the occipital lobe.

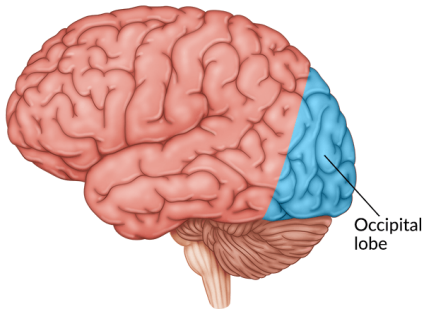

# SSVEP BCI

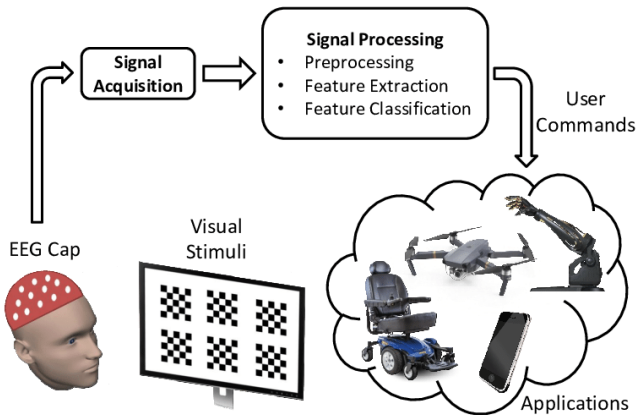


# This workshop

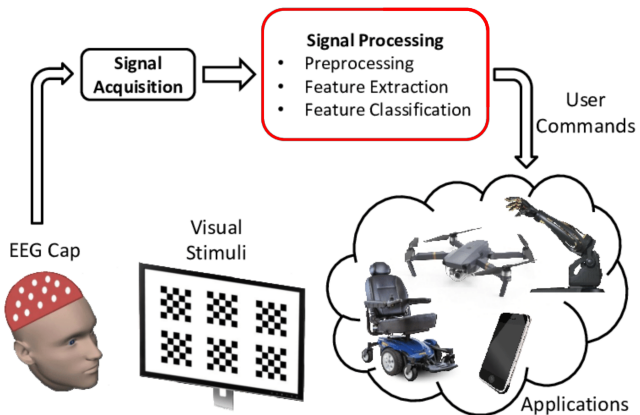


# The Fourier transform

**Time domain:**  $f(x) = 2 \cos(2\pi x * 2) + \cos(2\pi x * 3)$

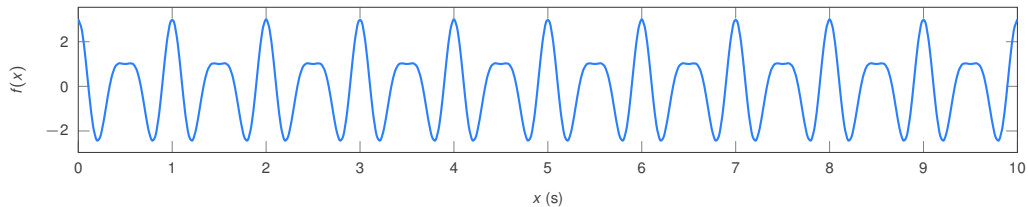


**Frequency domain:**

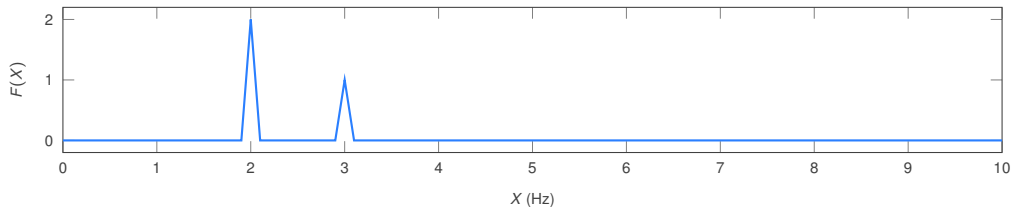


# Filtering

**Broadband signal:**  $f(x) = 2 \cos(2\pi x * 2) + \cos(2\pi x * 3)$

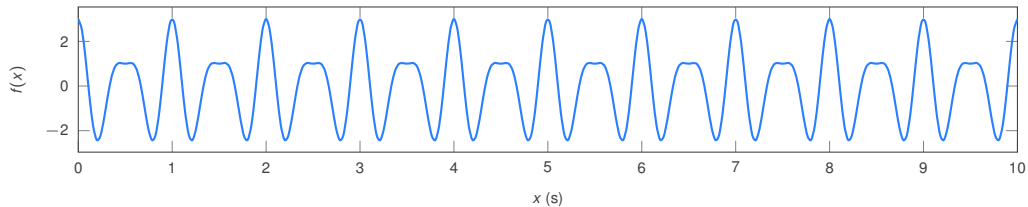


**Filtered signal at 2Hz:**

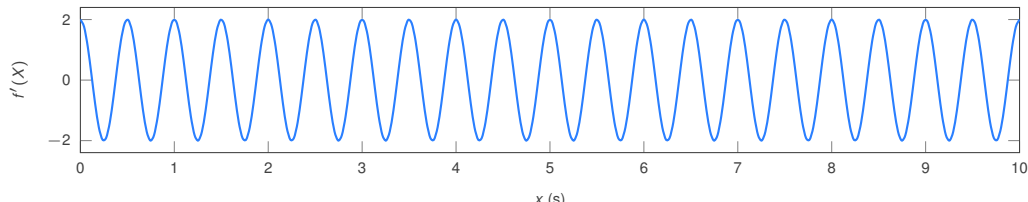

# Filtering

- ▶ Single frequency filter
- ▶ Band-pass filter
- ▶ Band-stop filter
- ▶ Notch filter
- ▶ Filterbank, Time-frequency transforms,  
Wavelet transform, Multitaper filtering, ...

# The EEG spectrum

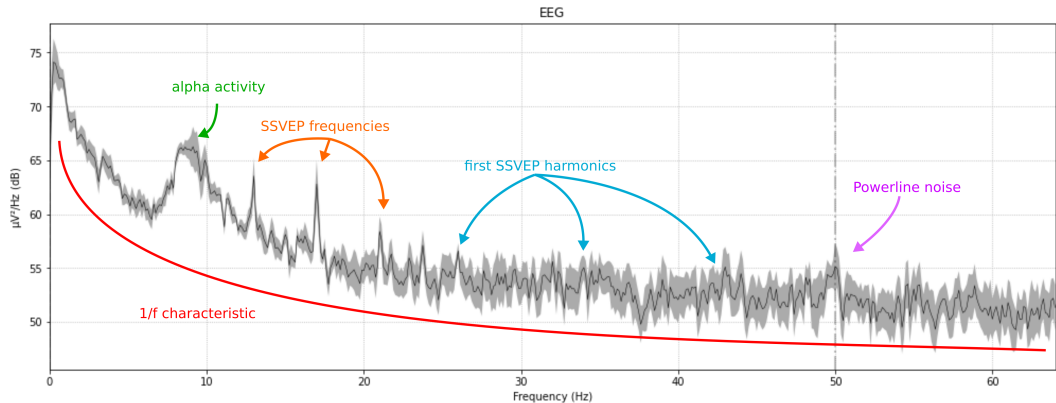



# Choosing stimulation frequencies

Consider

- ▶ SSVEP range (3.5-75Hz)
- ▶ Alpha activity (8-12Hz)
- ▶ Powerline frequency (EU: 50Hz, USA: 60Hz)
- ▶ Monitor refresh rate (60Hz, 144Hz, 240Hz, ...)
- ▶ Frequency spacing
- ▶ Comfort
- ▶ ...

**Mind the harmonics!**

## Choosing stimulation frequencies

Which of these SSVEP designs are suited for the EU power grid and a 60Hz monitor?

- ▶ 2Hz, 5Hz, 8Hz, 12Hz
- ▶ 13Hz, 17Hz, 21Hz
- ▶ 14Hz, 18Hz, 26Hz
- ▶ 20Hz, 30Hz, 40Hz, 50Hz
- ▶ 12Hz, 14Hz, 18Hz, 23Hz
- ▶ 6.66Hz, 7.50Hz, 8.57Hz, 10Hz, 12Hz,
- ▶ 10.13Hz, 11.47Hz, 12.67Hz

## Choosing stimulation frequencies

**Primes are your friend!**